

# OWNER'S MANUAL

## EazyR Programmable Remote Control

For Use With Eazy6 6-Zone Preampifier

**SpeakerCraft®**



## EVERYDAY USE

Pressing any of the six Source buttons at the bottom of the EazyR is the equivalent of picking up that remote control.

### For example, to play a CD

1. Press the CD Source button. This will set the EazyR to control your CD player.
2. Press the Select button. This will tell the sound system that you want to listen to the CD.
3. Use the Function buttons for Stop, Play, Pause, Volume up and Volume down.

Another Source button can be pressed at any time to control another component. However, unless the Select button is pressed, the previous source will continue to play. This feature allows you to control any component without interrupting the currently selected source.


## PROGRAMMING INSTRUCTIONS

### “Learning” Functions

1. Aim the EazyR and a source's remote control handset towards each other, about two inches apart.
2. Select one of the six Source buttons at the bottom of the EazyR (Tuner, CD, Sat, VCR, DVD or TV).
3. Press the Learn button on the EazyR. The Learn LED will illuminate.
4. Press and hold both the Function button you want to “learn” on the EazyR and the relevant button on the original handset until “Tx” LED illuminates.
5. Repeat the above steps as necessary.
6. Pressing any of the Source buttons or the Learn button will turn the Learn mode off. Leaving the EazyR untouched for 30 seconds will also turn off the Learn mode.

### Deleting Learned Functions

1. Press one of the Source buttons.
2. Press and hold both the Learn button and the Function button to be deleted.
3. Release the buttons after the Learn LED flashes twice.

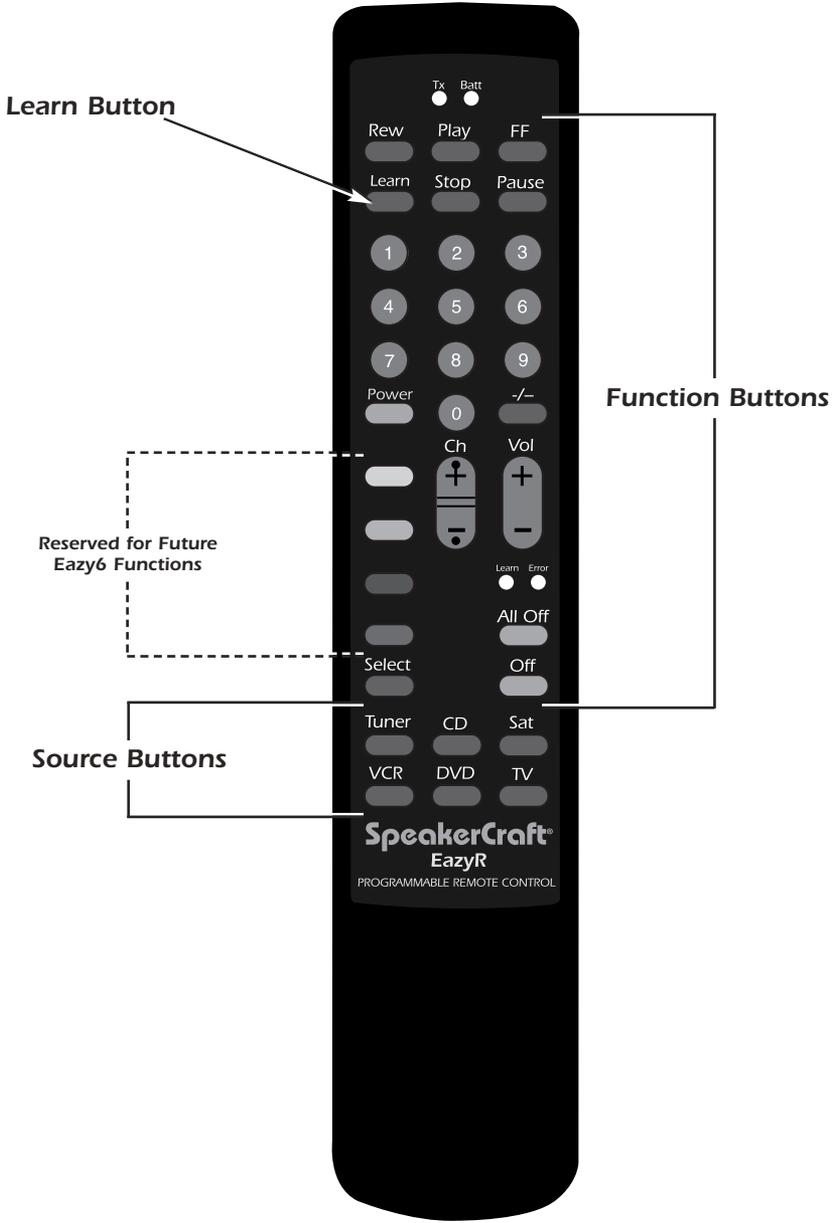

EazyR Programmable Remote Control

## LIMITED ONE YEAR WARRANTY

SpeakerCraft Inc. warrants to the original retail purchaser **only** that the EazyR Programmable Remote Control will be free from defects in materials and workmanship for a period of one year, provided it was purchased from a SpeakerCraft Authorized Dealer.

Defective products must be shipped, together with proof of purchase, prepaid insured to the SpeakerCraft Authorized Dealer from whom they were purchased, or to the SpeakerCraft factory at the address listed on this installation instruction manual. Freight collect shipments will be refused. It is preferable to ship this product in the original shipping container to lessen the chance of transit damage. In any case, the risk or loss or damage in transit is to be borne by the purchaser. If, upon examination at the Factory or SpeakerCraft Authorized Dealer, it is determined that the unit was defective in materials or workmanship at any time during this warranty period, SpeakerCraft or the SpeakerCraft Authorized Dealer will, at its option, repair or replace this product at no additional charge, except as set forth below. If this model is no longer available and can not be repaired effectively, SpeakerCraft, at its sole option, may replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification is required, SpeakerCraft assumes no responsibility or liability for such modification. All replaced parts and product become the property of SpeakerCraft Inc. Products replaced or repaired under this warranty will be returned to the original retail purchaser, within a reasonable time, freight prepaid.

This warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product which has not been authorized or approved by SpeakerCraft. This warranty also excludes normal cosmetic deterioration caused by environmental conditions. This warranty will be void if the serial number on the product has been removed, tampered with or defaced.

This warranty is in lieu of all other expressed warranties. If the product is defective in materials or workmanship as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. In no event will SpeakerCraft be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if SpeakerCraft Inc. or a SpeakerCraft Inc. Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply.

All implied warranties on the product are limited to the duration of this expressed warranty. Some states do not allow limitation on the length of an implied Warranty. If the original retail purchaser resides in such a state, this limitation does not apply.